

BASS DRUM



PITCH



LEVEL



TUNE DECAY



ATTACK



TUNE DEPTH



DECAY

SNARE DRUM



TUNE



TOPE



DISTO



LEVEL



SNAPPY

LOW TOM



TUNE



DECAY



LEVEL

MID TOM



TUNE



DECAY



LEVEL

HI TOM



TUNE



DECAY



LEVEL



VOLUME



POWER



MIDI

RIM SHOT CLAPS



LEVEL



LEVEL

HI HAT



TUNE



CH DECAY



LEVEL



OH DECAY

CYMBAL



LEVEL



CRASH TUNE



LEVEL



RIDE TUNE



TR 9090

Design by CRAZY - PATROCHE